
Lisence Light Bulb

1. Remove the lisence light lens by removine the two screws.
2. Pull out the bulb without turning.
3. Install a new bulb in the reverse order of removal.

