

////////////////////OPERATING INSTRUCTIONS////////////////////

-----Throttle Adjuster-----

The MR50 is equipped with an adjustable throttle grip stop that allows the instructor to limit the throttle opening and control the maximum power and maximum speed of the motorcycle.


The throttle adjuster ① is secured to the throttle grip bracket with a special screw ②. When the screw is installed in the "MAX" position full throttle operation is possible. When the screw is installed in the "MIN" position the maximum throttle

opening is limited to 1/4 of the total throttle travel.


The throttle stop is adjusted by removing the throttle adjusting screw and reinstalling it after aligning the desired throttle adjuster position with the hole in the throttle grip bracket.

NOTE:

The throttle adjusting screw is removed and installed with the throttle adjuster wrench ③ supplied with the tool kit.

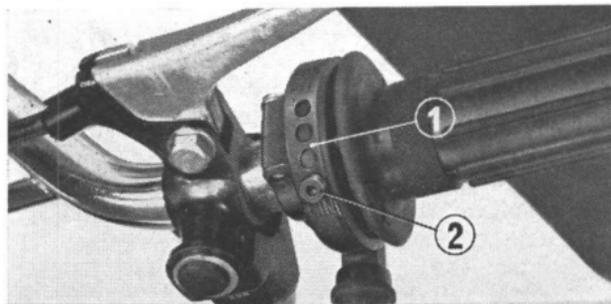

① Throttle adjuster ② Special screw

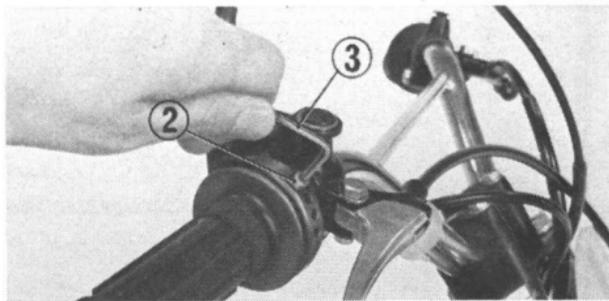

③ Throttle adjuster wrench