

Fuel Filter Maintenance

The fuel filter is incorporated in the fuel valve ① which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of the fuel and cause the carburetor to malfunction; therefore, the fuel filter should be serviced periodically.


1. Drain the fuel tank.
2. Loosen the fuel valve fixing nut ② and remove the fuel valve ① from the fuel



- ① Fuel valve
② Fuel valve retaining nut

tank.

3. Clean the fuel filter ③ using cleaning fluid.
4. Install the fuel filter in the fuel valve. Then secure the fuel valve to the fuel tank with the fuel valve retaining nut.
5. After installing, check for fuel leaks with the fuel valve control lever in the "ON" position.

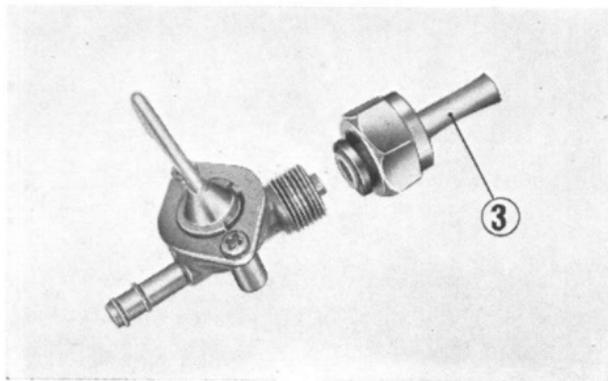

- ③ Fuel filter