



Front Brake Adjustment

Free play, measured at the tip of the front brake lever ①, should be maintained at **0.8–1.2 in. (20–30 mm)**. Free play is the distance the brake lever moves before the brake starts to engage.

1. To adjust the free play, turn the front brake adjuster ② in direction **A** to decrease the free play and in direction **B** to increase the free play.

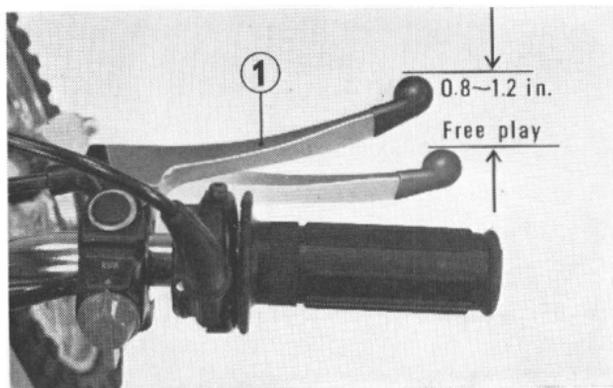

① Front brake lever

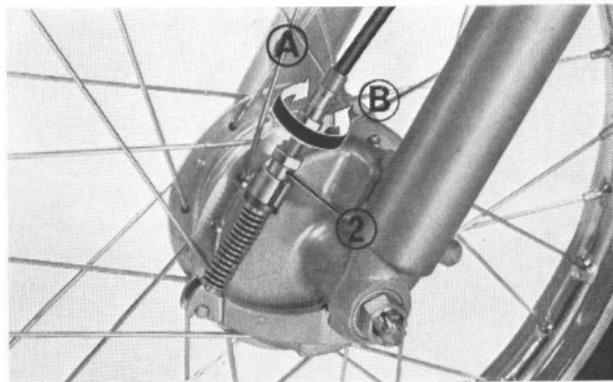

② Front brake adjuster