


Front Fork Oil Change


Oil in both front fork legs should be changed at least once a year.

1. Remove drain plug ① from each fork leg and pump the forks several times to ensure complete draining.
2. Reinstall drain plug and block up the front of the motorcycle.

3. Remove the oil filler plugs ②.
4. Refill each fork leg with **2.5 oz. (75 cc)** of premium quality automatic transmission fluid (ATF).
5. Install filler plugs, and remove block from under motorcycle.

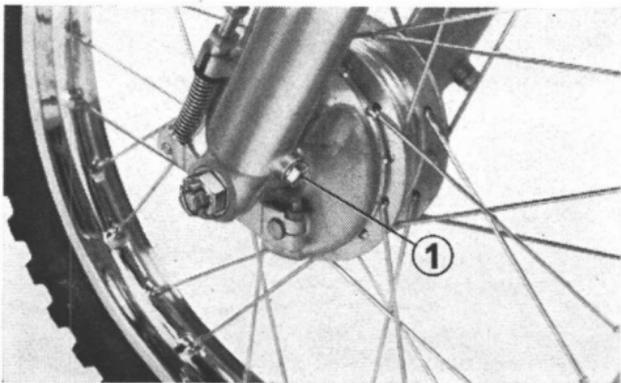

① Drain plug

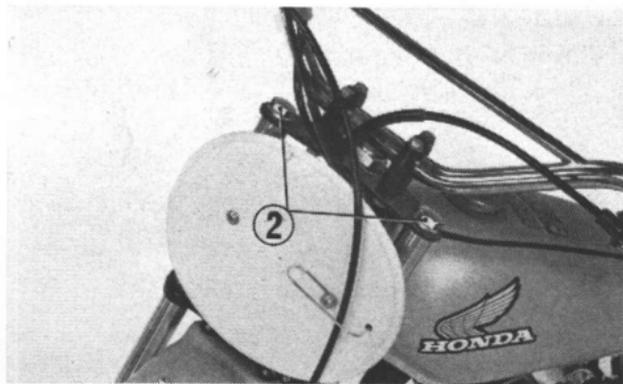

② Oil filler plugs