

Installation Notes:

- To install the rear wheel, reverse the removal procedure. Be sure to tighten the axle nut.

Axle nut torque:


7.0—10.0 kg-m (51—72 ft-lb)

- Position the lug (1) on the swingarm is located in the slot (2) in the brake panel (3).
- Adjust the brake (page 62) and drive chain (pages 68—72)
- Apply the brake several times and check for free wheel rotation when released.



WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*

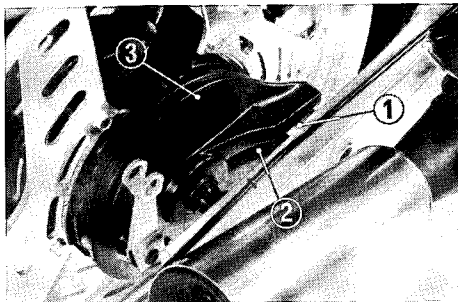

(1) Lug (3) Brake panel
(2) Slot