


FUSE REPLACEMENT

The main fuse (1), located near the battery on the positive lead, is 30A. The fuse box (4) is located between the handlebars. The specified fuses are 15A. When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.


CAUTION:

* *Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.*

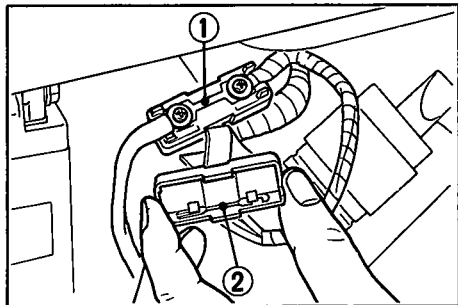

(1) Main fuse

(2) Spare main fuse

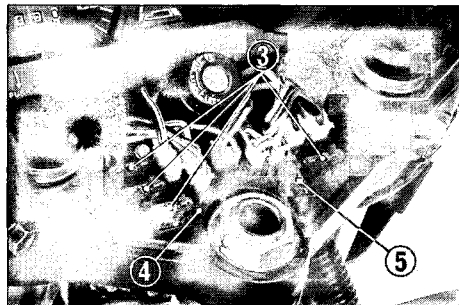

(3) Fuses

(4) Fuse box

(5) Spare fuse