

5. Remove the battery holder by removing the bolt.
6. Remove the battery taking care not to drop the terminal nuts.

## Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 43  
 "Battery Goes Dead." ➤ P. 78