


WHEEL REMOVAL

(Refer to the maintenance precautions on page 56).

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).
3. Remove the brake caliper mount bolts (3) and the brake caliper (4).

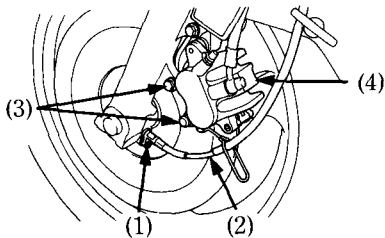


- (1) Speedometer cable set screw
(2) Speedometer cable
(3) Brake caliper bolt
(4) Brake caliper

4. Loosen the right and left axle pinch bolts (5) and remove the axle bolt (6).
Remove the axle and the wheel.

NOTE:

- * Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

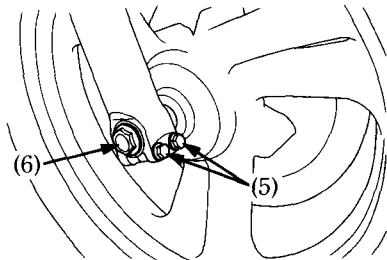

- (5) Axle pinch bolt
(6) Axle bolt