

## SIDE STAND (G, IIG, ND, FI)


(Refer to the maintenance precautions on page 52).

Perform the following maintenance in accordance with the maintenance schedule.

### Functional Check:

- Rest the motorcycle on the side stand as previously described.
- Raise the motorcycle. After leaving contact with the ground, the side stand should immediately retract automatically and fully.

- If the side stand moves sluggishly, lubricate the pivot area (1).
- Check the spring tension by pushing down the side stand. The side stand is doubly secured by two springs. If one of the springs should fail, be sure to replace it.
- If the side stand still moves sluggishly even after lubrication, if it does not retract fully, or if there is little or no spring tension, be sure to consult an authorized Honda dealer.

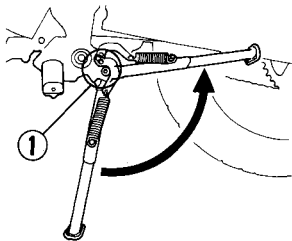

(1) Side stand pivot