

## Fuel Tank

The fuel tank is located under the seat. Unlock and lift up the seat (page 30), then remove the fuel cap (1) by turning it counterclockwise. Fuel tank capacity is:

3 ℓ (0.79 US gal, 0.66 Imp gal)


Install the fuel tank cap by turning it clockwise. Use low-lead or unleaded petrol with an Octane number of 91 or higher.

### FOR AUSTRALIA ONLY

Use unleaded fuel with a research octan number of 91 or higher.

### CAUTION:

\* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited warranty.

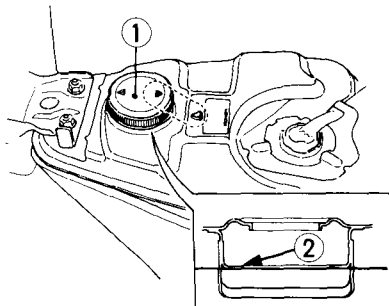

(1) Fuel cap

(2) Filler neck