

NOTE:

- * Fuel system damage or engine performance problem resulting from the use of fuels that contain alcohol is not covered under the warranty. Honda cannot endorse the use of fuels containing methanol since evidence of their suitability is as yet incomplete.
- * Before buying fuel from an unfamiliar station, try to find out the fuel contains alcohol, if it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a petrol that contains alcohol, or one that you think contains alcohol, switch to a petrol that you know does not contain alcohol.

ENGINE OIL

Engine Oil Level Check

When the oil level indicator lights, it means the oil level in the oil tank is low; stop the engine and fill the oil tank as soon as possible.

▲ WARNING

- * **If the warning light comes on while riding, stop riding and shut the engine off. Fill the oil tank to the UPPER LEVEL mark with the recommended oil (see page 19). Continuing to ride with a low oil level may lead to engine failure that could result in an accident.**

CAUTION:

- * **If the engine has been run after the oil indicator light has come on, the motorcycle must be taken to an authorized Honda dealer for inspection and bleeding of the oil system. Failure to do this will result in serious engine damage.**

To fill, lift the seat (page 30), remove the cap (1) from the oil tank, and fill with the recommended oil up to the UPPER LEVEL mark (2).

Capacity:

1.0 ℓ (1.06 US qt, 0.88 Imp qt)