


Engine Stop Switch (3) (U type)

The three position engine stop switch (3) is next to the throttle grip. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

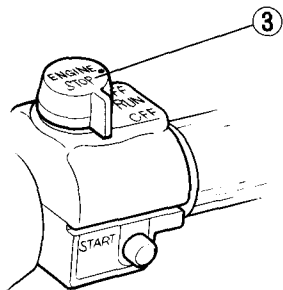

(3) Engine stop switch