

## IDLE SPEED

(Refer to the maintenance precautions on page 51).

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.


### NOTE:

\* Do not attempt to compensate for faults in other systems by adjusting idle speed. See your authorized Honda dealer for regularly scheduled carburetor adjustments.

1. Warm up the engine and place the motorcycle on its center stand.
2. Connect a tachometer to the engine.
3. Adjust the idle speed with the throttle stop screw (1).

### IDLE SPEED:

$1,800 \pm 100 \text{ min}^{-1}$  (rpm)

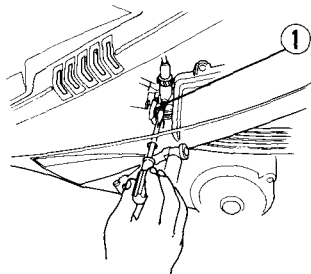

(1) Throttle stop screw