CONTENTS

SERIAL NUMBER LOCATION	4
IOMENCLATURE	5
PERATING INSTRUCTIONS	15
ELECTRICAL CONTROLS	15
Speedometer	15
Main Switch	16
Headlight Control/Beam Control Switch	18
Turn Signallight Control Switch	19
Horn Button	19
MECHANICAL CONTROLS	20
Seat Latch	20
Choke Lever	20
Gear Change Pedal	21
Helmet Holder	22
FUEL AND OIL	23
Fuel Tank	. 23
Fuel Tank Cap	23
Fuel Valve	24
Engine Oil Recommendation	25
Viscosity	25
CARRYING THE MOTORCYCLE	26
PREPARATION FOR RIDING	30
TIRE RECOMMENDATION	33
STARTING THE ENGINE	34
Starting a Cold Engine	34
Starting in Extreme Cold Weather	35