


## Headlight/Position Light Bulb


1. Remove the two bolts (1) from the headlight case.
2. Gently pull the lower end of the headlight (2) forward and remove the headlight.
3. Disconnect the connector (3).
4. Remove the seat rubber (4).

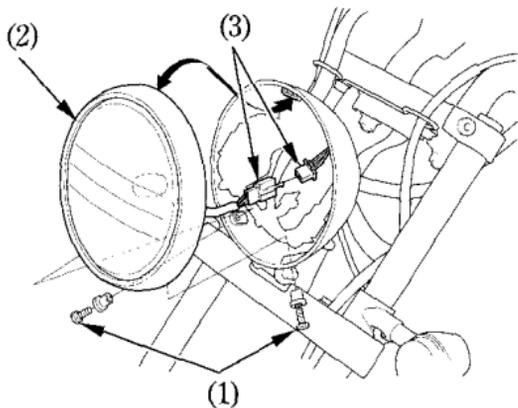

(1) Bolts  
(2) Headlight

(3) Connector

5. Remove the socket (5) from headlight by slightly pressing the socket and turning it counterclockwise.
6. Remove the bulb (6).
7. Install a new bulb in the reverse order of removal.

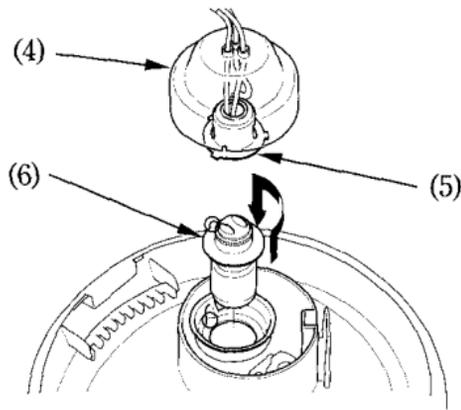

(4) Seat rubber  
(5) Socket

(6) Bulb