

	FREQUENCY	ITEMS	Whichever comes first ↷	INITIAL MAINTENANCE		REGULAR MAINTENANCE INTERVAL		Refer to page	
				mi	100	600	1200		
				km	150	1000	2000		
				NOTE	HOURS	20	100		200
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(R: EVERY 2YEARS)	I	100	
	*	BRAKE FLUID	(NOTE3)				I	I	112
	*	BRAKE SHOE WEAR	(NOTE2)					I	117
		BRAKE SYSTEM			I	I	I	I	109-118
	*	REVERSE LOCK SYSTEM			I	I	I	I	104
		SKID PLATES, ENGINE GUARD					I	I	125
	*	CLUTCH SYSTEM			I	I	I	I	103
	*	SUSPENSION					I	I	-
	*	SPARK ARRESTER					C	C	126
	*	NUTS, BOLTS, FASTENERS			I			I	-
	**	WHEELS/TIRES			I	I	I	I	119-123
	**	STEERING SHAFT HOLDER BEARINGS						I	-
	**	STEERING SYSTEM						I	-

- \* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.
- \*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: 1. Service more frequently after riding in very wet or muddy conditions.  
 2. Service more frequently when riding in dusty areas, sand or snow.  
 3. Replace every 2 years. Replacement requires mechanical skill.