

## PARTS FUNCTION

### Speedometer (U type)


Speedometer is mounted on the left to the front carrier. Use the trip meter to calculate mileage on trips. Reset to zero with the knob (1).

#### NOTE:

\* Disconnect the breather tube (2) to demist if the speedometer gets misted. Disconnect the breather tube at the side with no clip attached and, after demisted, connect it to the speedometer securely.

### Ignition Switch

The ignition switch (3) is on the handlebar upper holder.

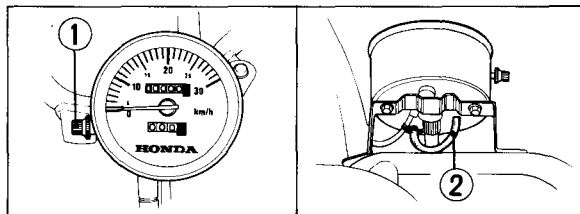

(1) Knob

(2) Breather tube

(3) Ignition Switch

Key Position	Function	Key Removal
OFF	Engine and headlight cannot be operated.	The key can be removed.
ON	Headlight can be turned on. With the engine stop switch at RUN and transmission in neutral, the engine can be started.	The key cannot be removed.