

Riding in Reverse

4. Release the rear brake lever/parking brake lever.
5. Open the throttle gradually and ride slowly. Do not open the throttle suddenly or make abrupt turns.
6. To stop, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
7. To shift out of reverse and into neutral, press the upshift switch (4) once to shift into “N” (neutral) gear.

The transmission cannot be shifted from neutral back into reverse when the engine speed is above 3,000 rpm or speed of your ATV is above 3 km/h (2 mph).

▲ WARNING

Applying only the rear brake abruptly when operating in reverse gear could cause the front wheels to lift off the ground and the ATV could overturn backwards.

Carefully apply both the front and rear brakes when stopping in reverse gear.