

2. **Fuel level.** Fill the fuel tank when necessary (pages 84—87). Check for leaks.
3. **Brakes.** Check operation. Make sure there is no brake fluid leakage. If necessary, adjust free play (pages 117—126).
4. **Tires.** Check condition and pressure (pages 128—130).
5. **Throttle.** Check for smooth opening and closing in all steering positions.
6. **Headlight and headlight dimmer switches.** Check for proper function (page 20).
7. **Engine stop switch.** Check for proper function (page 14).
8. **Driveshaft boots**-check for damage (page 136).
9. **Nuts, bolts, fasteners.** Check the wheels to see that the axle nuts are tightened. Check the security of all other nuts, bolts and fasteners.
10. **Steering.** Check that the wheels turn properly as you steer the handlebars.
11. **Cargo.** Check that all cargo is properly secured.
12. **Underbody and exhaust system.** Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.
13. **Air cleaner Case Drain Tube.** Check for, deposits in the Drain Tube. If necessary, clean the Tube (page 95) and check the air cleaner case.

WARNING

POTENTIAL HAZARD

**Failure to inspect the ATV before operating.
Failure to properly maintain the ATV.**

WHAT CAN HAPPEN

Increases the possibility of an accident.

HOW TO AVOID THE HAZARD

Always inspect your ATV each time you use it to make sure the ATV is in safe operating condition.

Always follow the inspection and maintenance procedures and schedules described in this Owner's Manual.