

	FREQUENCY ITEMS	Whichever comes first ⇨ NOTE	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL		
			mi	100	600	1200	
			km	150	1000	2000	
		HOURS	20	100	200		
NON EMISSION RELATED ITEM	DRIVE SHAFT BOOTS						--
	FRONT GEAR CASE OIL, FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)		106 – 109
	* BRAKE FLUID	(NOTE3)					122 – 123
	* BRAKE SHOE WEAR	(NOTE1)					119,124
	BRAKE SYSTEM						119 – 128
	* REVERSE LOCK SYSTEM						113
	SKID PLATES,ENGINE GUARD						135
	* CLUTCH SYSTEM						112
	* SUSPENSION						--
	* SPARK ARRESTER				C	C	136
	* NUTS, BOLTS, FASTENERS						--
	** WHEELS/TIRES						129 – 133
	** STEERING SHAFT HOLDER BEARINGS						--
** STEERING SYSTEM						--	

- * SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
2. Service more frequently after riding in very wet or muddy conditions.
3. Replace every 2 years. Replacement requires mechanical skill.