

|   |        |
|---|--------|
| Fuel strainer screen.....                   | 90     |
| Fuel fill cap.....                          | 26, 86 |
| Fuel tank cap vent lever .....              | 26     |
| Fuel tank capacity.....                     | 86     |
| Fuel valve.....                             | 26     |
| High altitude fuel mixture adjustment ..... | 99     |
| Refueling.....                              | 86     |
| Reserve fuel supply.....                    | 27     |
| <b>Fuses</b>                                |        |
| Location .....                              | 117    |
| Replacement.....                            | 118    |

## **G**

|                               |        |
|-------------------------------|--------|
| Gasoline (see Fuel)           |        |
| Gearshift pedal.....          | 23     |
| Gearshifting.....             | 23, 61 |
| Gearcase oil                  |        |
| Front gear case oil.....      | 106    |
| Rear final gear case oil..... | 107    |

## **H**

|   |    |
|---|----|
| Headlight switches.....                     | 20 |
| Helmet holder.....                          | 29 |
| High altitude fuel mixture adjustment ..... | 99 |
| <b>Hills</b>                                |    |
| Riding across slopes .....                  | 76 |
| Riding down hills.....                      | 74 |
| Riding up hills.....                        | 67 |
| Stopping on hills .....                     | 69 |
| Turning on slopes.....                      | 77 |

## **I**

|                              |    |
|------------------------------|----|
| Idle speed adjustment .....  | 98 |
| Ignition switch.....         | 13 |
| Indicator lamp               |    |
| Reverse indicator lamp.....  | 22 |
| Neutral indicator lamp ..... | 22 |
| Inspection, pre-ride.....    | 36 |

## **K**

|                   |    |
|-------------------|----|
| Kick starter..... | 17 |
|-------------------|----|