

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
			NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	*	FUEL LINE					I	—
	*	THROTTLE OPERATION					I	104
	*	CARBURETOR CHOKE					I	109
		AIR CLEANER	(NOTE 1)			C	C	105–107
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	108
		SPARK PLUG				I	I	120–121
	*	VALVE CLEARANCE				I	I	121
		ENGINE OIL				R	R	37, 112–116
		ENGINE OIL FILTER				R	R	112–116
	*	ENGINE IDLE SPEED				I	I	110

- I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate