

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean      R: Replace A: Adjust    L: Lubricate	EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page	
*	BRAKE SHOE WEAR	YEAR I (NOTE 2)			65, 66
	BRAKE SYSTEM		I	I	65-69
*	REVERSE LOCK SYSTEM		I	I	-
*	CLUTCH SYSTEM		I	I	70
	SKID PLATE, GUARD PLATE			I	71
*	SUSPENSION			I, L	-
*	NUT, BOLT, FASTENER		I	I	-
**	WHEEL		I	I	-
**	STEERING SHAFT HOLDER BEARING	YEAR I			-
**	STEERING SYSTEM	YEAR I			-

\* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER. UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.  
2. Service more frequently after riding in very wet or muddy conditions.