

		FREQUENCY ITEMS	Whichever comes first	INITIAL		REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL			
			↷	mi	100	600	1200	
				km	150	1000	2000	
		NOTE	HOURS	20	100	200		
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL			(R: EVERY 2YEARS)	I	111	
	*	BRAKE FLUID	(NOTE3)			I	I	126
	*	BRAKE SHOE WEAR	(NOTE1)				I	131
		BRAKE SYSTEM			I	I	I	123 – 132
	*	REVERSE LOCK SYSTEM			I	I	I	115
		SKID PLATES,ENGINE GUARD				I	I	139
	*	CLUTCH SYSTEM			I	I	I	114
	*	SUSPENSION				I	I	—
	*	SPARK ARRESTER				C	C	140
	*	NUTS, BOLTS, FASTENERS			I		I	—
	**	WHEELS/TIRES			I	I	I	133 – 137
	**	STEERING SHAFT HOLDER BEARINGS					I	—
	**	STEERING SYSTEM					I	—

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

**IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.