


# Drive Chain

---

6. Inspect the front and rear sprocket teeth for excessive wear or damage.  
If necessary, have your Honda dealer replace a worn sprocket.

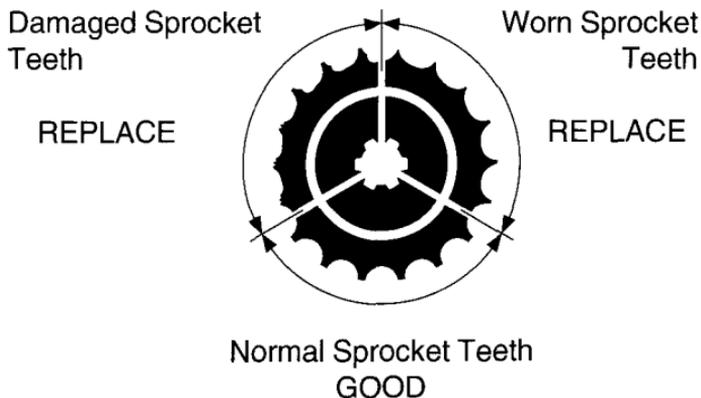

## NOTICE

*Use of a new chain with worn sprockets will cause rapid chain wear.*

## Adjustment

Refer to *Safety Precautions* on page 71.

1. To adjust slack, use an Allen wrench ( 1 ) to loosen the rear axle holder fixing bolts ( 2 ).
2. Turn the adjuster ( 3 ) to decrease or increase chain slack.
3. Retighten the rear axle holder fixing bolts.

Rear axle holder fixing bolts torque:  
15 lbf·ft ( 21 N·m , 2.1 kgf·m )

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.