

## FUEL SYSTEM

### FUEL

#### Refueling

Fuel tank capacity is 3.2 US gal (12.0 ℓ), including 0.7 US gal (2.7 ℓ) in the reserve supply.

To open the fuel fill cap (1), turn the fuel fill cap counterclockwise.

Do not overfill (make sure there is no fuel in the filler neck(2)).

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise until it clicks.

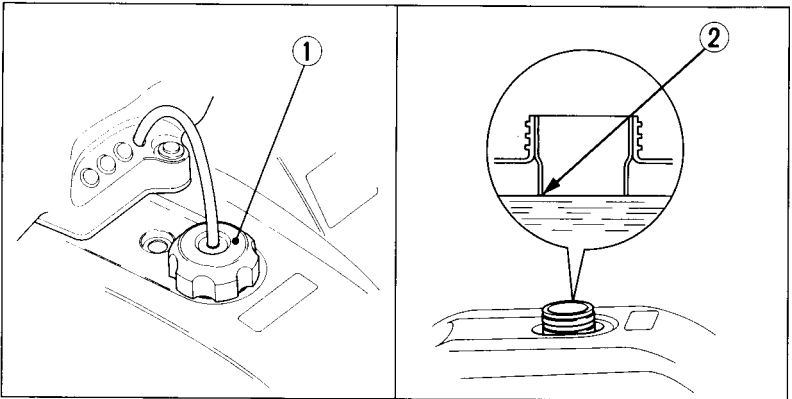


Fig. 4-2

(1) Fuel fill cap

(2) Filler neck