

## MAINTENANCE AND REPAIRS

### MAINTENANCE SCHEDULE

D U	FREQUENCY  ITEMS	Whichever comes first  ↷	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
			mi	100	600	1200	
			km	150	1000	2000	
NOTE	HOURS	20	100	200			
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	92
*	CARBURETOR CHOKE					I	97
	AIR CLEANER	(NOTE 1)			C	C	93–95
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	96
	SPARK PLUG				I	I	108–109
*	VALVE CLEARANCE			I	I	I	109
	ENGINE OIL			R	R	R	31 100–104
	ENGINE OIL FILTER			R	R	R	102–104
*	ENGINE IDLE SPEED			I	I	I	97–98

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean      R: Replace

A: Adjust     L: Lubricate