

P

| | |
|------------------------------|----|
| Parking..... | 82 |
| Parts location..... | 10 |
| Parking brake..... | 27 |
| Passenger carrying | 48 |
| Pavement, no riding on | 50 |
| Petrol (see Fuel) | |
| Pinging..... | 90 |
| Pre-ride inspection | 38 |

R

| | |
|--------------------------------|--------|
| Rear final gear case oil | 105 |
| Recoil starter | 19 |
| Reverse | |
| Assist cable..... | 111 |
| Assist lever | 111 |
| Gear, shifting into | 25, 63 |
| Indicator lamp..... | 23 |
| Riding in reverse | 64 |
| Selector knob..... | 26 |

S

| | |
|-------------------------------------|--------|
| Safety messages, special | 1 |
| Seat removal and installation | 134 |
| Serial numbers..... | 151 |
| Shifting gears | 25, 63 |
| Skid plates | 135 |
| Skidding..... | 68 |
| Spark arrester..... | 136 |
| Spark knock..... | 90 |
| Spark plug | 108 |
| Specifications..... | 148 |
| Speedometer..... | 24 |
| Stalling on a hill | 71 |
| Starter button | 17 |
| Starting primer knob..... | 18 |
| Storage compartment..... | 35 |
| Storing procedures | 145 |