

Battery Removal

1. Make sure the ignition switch is OFF (\circ).
2. Remove the seat (page 134).
3. Remove the battery holder (1), (Fig. 4-19) by removing the mount bolts (2).
4. Disconnect the negative ($-$) terminal lead (3) from the battery (4) first, then disconnect the positive ($+$) terminal lead (5).
5. Remove the battery.
 - * Install in the reverse order of removal.
 - * Check all bolts and other fasteners are secure.
 - * After installing the battery, check to see if the battery cables are routed correctly.