



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
		MONTH	1	6	12		
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS				I	I	162
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TE)				(R:EVERY 2 YEARS)	I	114, 116
	REAR FINAL GEAR CASE OIL (TRX420TE only)				(R:EVERY 2 YEARS)	I	114
*	2WD/4WD SELECT SYSTEM (Except TRX420TE)					I	—
*	BRAKE FLUID	NOTE 3			I	I	142
*	BRAKE SHOES WEAR	NOTE 1,2				I	150
*	BRAKE PADS WEAR	NOTE 1,2				I	145
*	BRAKELIGHT SWITCH			I	I	I	151
	BRAKE SYSTEM			I	I	I	142
*	REVERSE LOCK SYSTEM			I	I	I	133
	GUARDS				I	I	160
*	CLUTCH SYSTEM			I	I	I	132
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	138
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	—
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

