



# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 89 .

Your ATV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

### NOTICE


*Using the wrong oil filter may result in leaks or engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid (page 182). If you do not have the skills or the tools, see your Honda dealer.

#### *Drain the Engine Oil:*

1. With the ATV on the level ground, remove the seat (page 100 ), left side cover (page 108 ) and the oil filler cap/dipstick from the front crankcase.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug ( 1 ) and sealing washer ( 2 ).

#### UNDER ENGINE

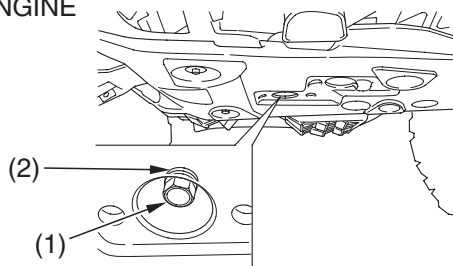

(1) engine oil drain plug      (2) sealing washer

## 110 Servicing Your Honda