



## Emergency Gear Selection & Operation

---

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to a Honda dealer.

1. Turn the ignition switch to the “ON” ( I ) position.
2. Remove the seat (page100).
3. Remove the gear change tool from underside of the seat (page 98 ).
4. Check the neutral indicator.

If the transmission is in neutral, go to step 5.

If the transmission is not in neutral, remove the left side cover (page 108 ), use the gear change tool to shift to neutral so you will be able to start the engine, Refer to *How to Shift Gears Manually* (page191).

5. Apply the parking brake.
6. Press the start button to start the engine.
7. Select the gear you want. For running on level ground: use 3rd or 4th gear. For mountainous roads: use 2nd or 3rd gear. Refer to *How to Shift Gears Manually* (page191).
8. Return the gear change tool to underside of the seat.
9. Install the left side cover.
10. Install the seat.
11. Get on the ATV. Drive it at a safe speed to a place where it can be repaired or serviced.

### 190 Taking Care of the Unexpected