


Indicators & Displays

The indicators and displays on your ATV keep you informed, alert you to possible problems, and make your riding safer and more enjoyable. Refer to the indicators frequently. Their functions are described on the following pages.

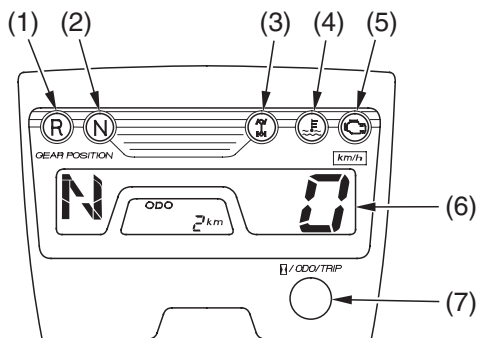

- | | |
|---|--|
| (1) reverse indicator | (5) PGM-FI indicator |
| (2) neutral indicator | (6) multi-function display |
| (3) 4WD indicator
(TRX420FM only) | (7) hourmeter/odometer/
tripmeter select button |
| (4) high coolant temperature
indicator | |

Lamp Check

The high coolant temperature indicator and PGM-FI indicator come on for a few seconds and then go off when you turn the ignition switch ON (I).