
Spark Arrester

Refer to Safety Precautions on page 89.

The exhaust system must be periodically purged of accumulated carbon. To purge the system:

REAR

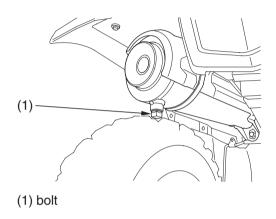

- 1. Select a well-ventilated area free of combustible materials and make sure the exhaust pipe is cool.
- 2. Remove the bolt (1).
- 3. Start the engine and rev it up approximately twenty times while momentarily creating exhaust system back pressure by blocking the end of the muffler with a shop towel.
- 4. Stop the engine and allow the exhaust pipe to cool.
- 5. Reinstall the bolt securely.