


Air Cleaner

Cleaning

1. Remove the seat by pulling the seat lock lever (1) up (page 82).

UNDER SEAT

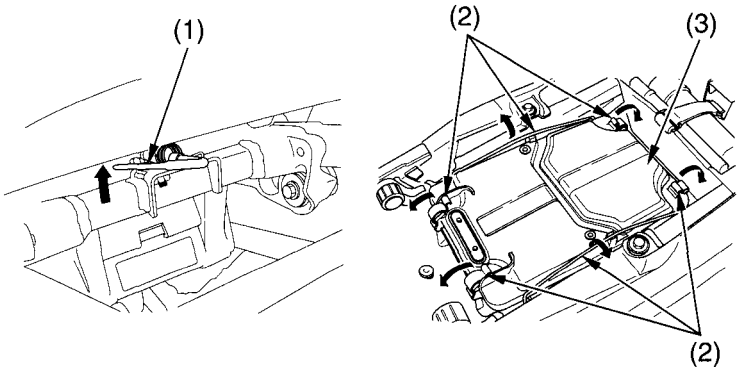

(1) seat lock lever
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the four retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)