


Clutch System

Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

LEFT HANDLEBAR

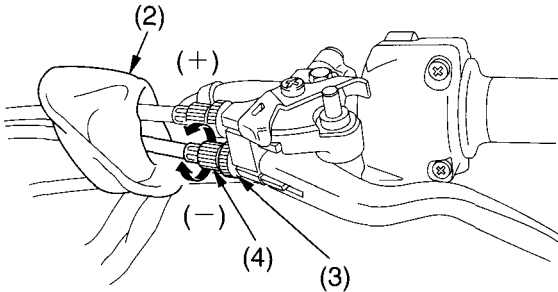

(2) dust cover

(3) upper lock nut

(4) upper clutch cable
adjuster

(+) increase freeplay

(-) decrease freeplay

1. Pull back the dust cover (2).
2. Loosen the upper lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.
4. Tighten the lock nut and check the freeplay again.