



# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
DRIVE CHAIN		NOTE 1,2		I, L	I, L EVERY 500 km (300 mi) or 50 operating hours		152
DRIVE CHAIN SLIDER					I	I	154
* BRAKE FLUID		NOTE 3			I	I	134
* BRAKE PADS WEAR		NOTE 1,2				I	138
* BRAKELIGHT SWITCH				I	I	I	141
BRAKE SYSTEM				I	I	I	134
SKID PLATES, ENGINE GUARD					I	I	151
* CLUTCH SYSTEM				I	I	I	116
* SUSPENSION					I	I	128
* SPARK ARRESTER					C	C	126
* NUTS, BOLTS, FASTENERS				I		I	—
** WHEELS/TYRES				I	I	I	—
** TIE-ROD AND JOINT BOOTS				I	I	I	—
** STEERING SHAFT HOLDER BEARINGS						I	—
** STEERING SYSTEM						I	—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.