


Air Cleaner


Cleaning

1. Remove the seat by pulling the seat lock lever (1) up (page 112).

UNDER SEAT

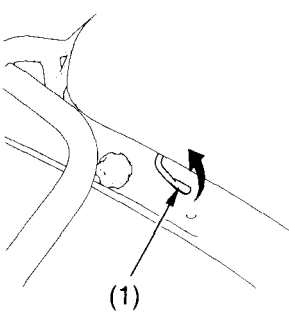

(1) seat lock lever
(2) retainer clips

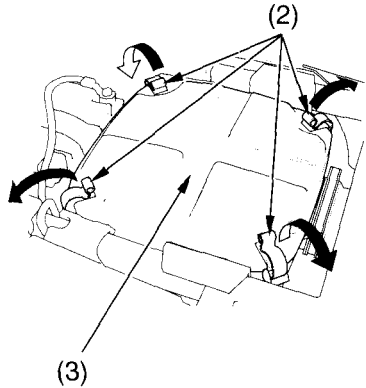

(3) air cleaner housing cover

2. Unlatch the retainer clips (2).
3. Remove the air cleaner housing cover (3).