

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 131.

Check the engine oil level each day before operating your ATV and add if needed.

Before checking the engine oil level

1. Park your ATV on a firm, level surface.
2. Remove the dipstick (1) from the oil tank and wipe it clean.
3. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level.


If the oil level is above the tip mark (2), install the dipstick and proceed to the oil level check.

If the oil does not stick to the dipstick or the oil level is below the tip mark, do not start the engine.

Before starting the engine, remove the oil filler cap (3) and add the specified oil into the filler cap hole, up to the lower level mark (4) on the dipstick. Do not over fill.

Reinstall the oil filler cap and dipstick.

Proceed to the oil level check.

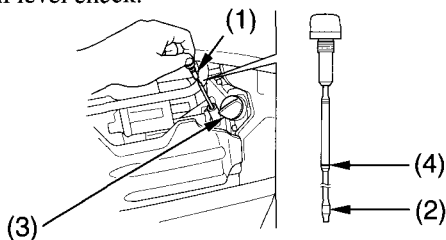

(1) dipstick
(2) tip mark

(3) oil filler cap
(4) lower level mark

(cont'd)