




GPS Mode

(For TRX500FPA)

Push the GPS/WP button (2) to switch between the GPS mode and the other two modes: odometer and tripmeter.

To change the display to odometer or tripmeter, press and release the odometer/tripmeter select button (3) while the display is in the GPS mode. The display will change to the previous display mode (odometer or tripmeter).

Any time you are not in the GPS mode, the compass direction indicator (4) will function while your ATV is moving (one mph or faster) (page 87).

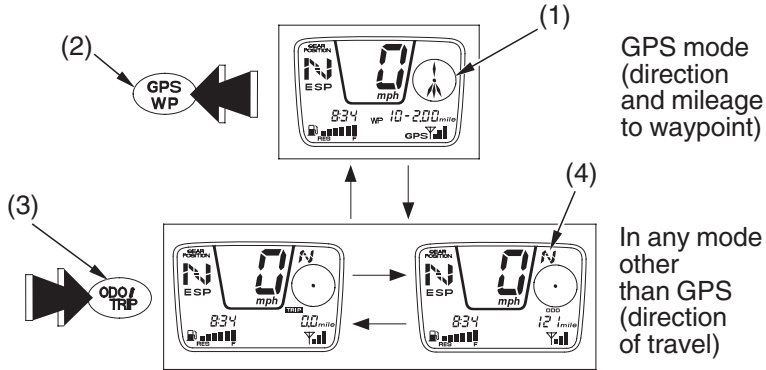

- (1) GPS mode
- (2) GPS/WP button
- (3) odometer/tripmeter select button
- (4) compass direction indicator

