




# Starting & Stopping the Engine

## Starting Procedure

To restart a warm engine, follow the procedure for ‘*High Air Temperature.*’

Normal Air Temperature 10°–35°C (50°–95°F)

CENTER OF HANDLEBAR

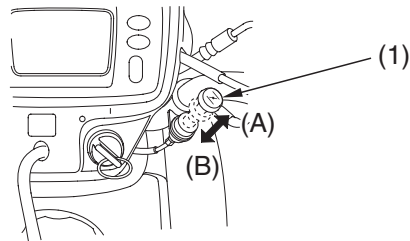

(1) choke knob

(A) fully ON  
(B) fully OFF

1. If the engine is cold, pull the choke knob (1) up all the way to fully ON (A) position.
2. With the throttle closed, press the start button.
  - Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.
3. Immediately after the engine starts, operate the choke knob to keep fast idle.
4. Continue warming up the engine until it runs smoothly and responds to the throttle with the choke knob in the fully OFF (B) position.
5. If idling is unstable, open the throttle slightly.

