




Shifting Gears


Two gearshift switches are located next to the left handlebar grip:
upshift (⬆) and downshift (⬇).

To upshift the transmission, press the upshift switch (4) once.
To downshift the transmission, press the downshift switch (5) once.

UPSHIFTING SEQUENCE

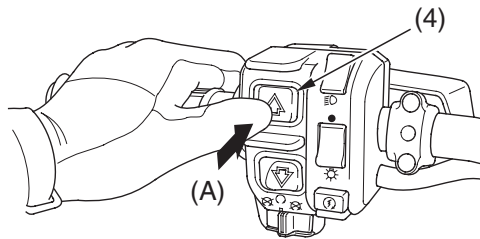

DOWNSHIFTING SEQUENCE

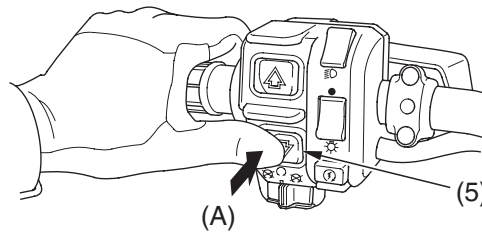

- (4) upshift switch
- (5) downshift switch
- (A) press

