



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			mi	600	1200		
			km	1000	2000		
		HOURS	20	100	200		
* FUEL LINE					I	—	
* THROTTLE OPERATION					I	185	
* CARBURETOR CHOKE					I	187	
AIR CLEANER		NOTE 1			C	C	179
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2			I	I	184
SPARK PLUG					I		189
* VALVE CLEARANCE					I	I	192
ENGINE OIL			INITIAL=	100 mi (150 km), 20 operating hours or 1 month: R			162
			REGULAR=	Every 600 mi (1,000 km), 100 operating hours or 12 months: R			
ENGINE OIL FILTER				R	R	R	167
* ENGINE IDLE SPEED				I	I	I	188
RADIATOR COOLANT		NOTE 3			I	I	175
* COOLING SYSTEM		NOTE 2			I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 278).

150 Servicing Your Honda

