




If a Fuse Blows

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

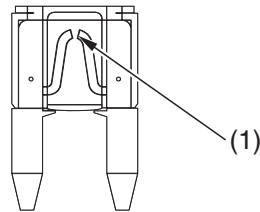

(1) blown fuse



The main fuse and the circuit fuses are located in the battery compartment.

(TRX500FPA only)

The PS (Electric Power Steering) fuse is located near the battery.

Recommended Fuses

main fuse	30 A
shift motor fuse	30 A
other fuses	15 A × 2, 10 A × 2
PS (Electric Power Steering) fuse (TRX500FPA only)	40 A

252 Taking Care of the Unexpected

