


If a Fuse Blows

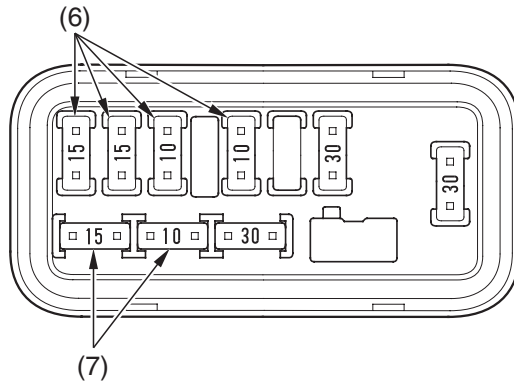

(6) circuit fuses

(7) spare fuses



Circuit Fuse Access

5. To check or replace a circuit fuse (6), pull the old fuse out of its retaining clips.

If the fuse is blown, replace it with a spare fuse (7) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

6. Install the fuse box cover.

7. Install the seat.



254 Taking Care of the Unexpected

