

# Controls & Features


---

## Ignition Switch

The ignition switch ( 1 ) is used for starting and stopping the engine (page 64 ). Insert the key and turn it to the right for the ON ( I ) position.

Key Position	Function
ON ( I )	Electrical circuits on.
OFF ( O )	No electrical circuits function.

### CENTRE OF HANDLEBAR

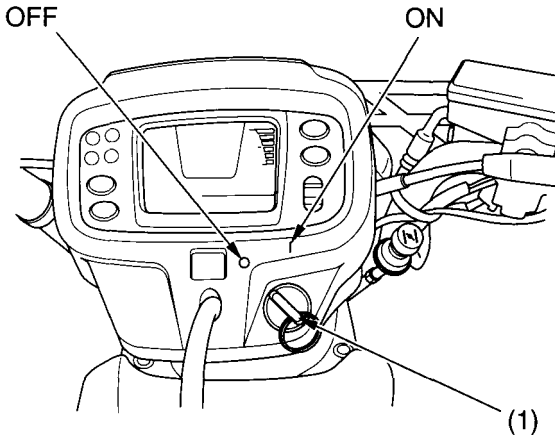

(1) ignition switch

I ON  
O OFF