

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		FIRST	km	150	1000	2000	
		⇒	mi	100	600	1200	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		127
* CARBURETOR CHOKE					I		129
AIR CLEANER		NOTE 1			C	C	121
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2			I	I	126
SPARK PLUG					I	I	134
* VALVE CLEARANCE				I	I	I	137
ENGINE OIL				INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			108
ENGINE OIL FILTER				R	R	R	113
* ENGINE IDLE SPEED				I	I	I	132

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.