



## Indicators & Displays

### Gear Position Indicator

The gear position indicator (1) shows the gear position when the ignition switch is in the ON ( I ) position.


The indicator displays: N for neutral, R for reverse, and 1 – 5 for the five forward gears.

“- -” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before riding, check that the gear position is properly displayed on the gear position indicator.

If the gear position indicator shows “- -” and blinks, turn the ignition switch to the OFF ( O ) position, and then turn it back to the ON ( I ) position again. If the gear position indicator still shows “- -” and blinks, see your Honda dealer.

TRX500FM

TRX500FPM

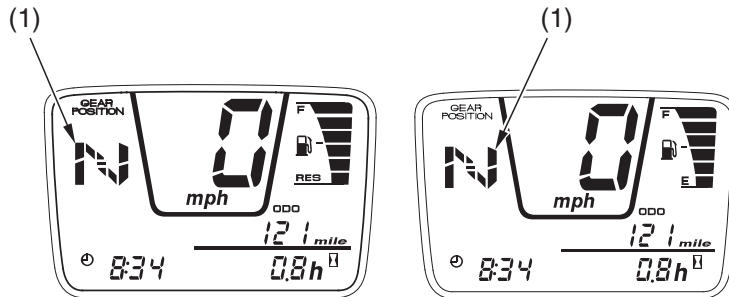

(1) gear position indicator

