

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
	DRIVE SHAFT BOOTS						190
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(REVERY 2 YEARS)		152 154
*	BRAKE FLUID	NOTE 3					174
*	BRAKE PADS WEAR	NOTE 1,2					177
*	BRAKELIGHT SWITCH						181
	BRAKE SYSTEM						174
	SKID PLATE, ENGINE GUARD						189
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	172
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						—
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 248 ).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.